




1:BOOST PRESSURE GAUGE
2:RPM GAUGE
3:COMBINED OIL/FUEL PRESSURE
4:OIL TEMPERATURE
5:PROP-PITCH INDICATOR


6:AIRSPED INDICATOR
7:TURN-SLIP
8:VSI
9:ALTIMETER
10:MAGNETIC COMPASS
11:GEAR POSITION IND.

12:CLOCK (LOCAL TIME)
13:ALTERNATOR CURRENT
14:STARTER
15:FUEL LEVEL (x10LITERS)
16:AUTOMATIC FIRE EXTINGUISHER
INDICATOR

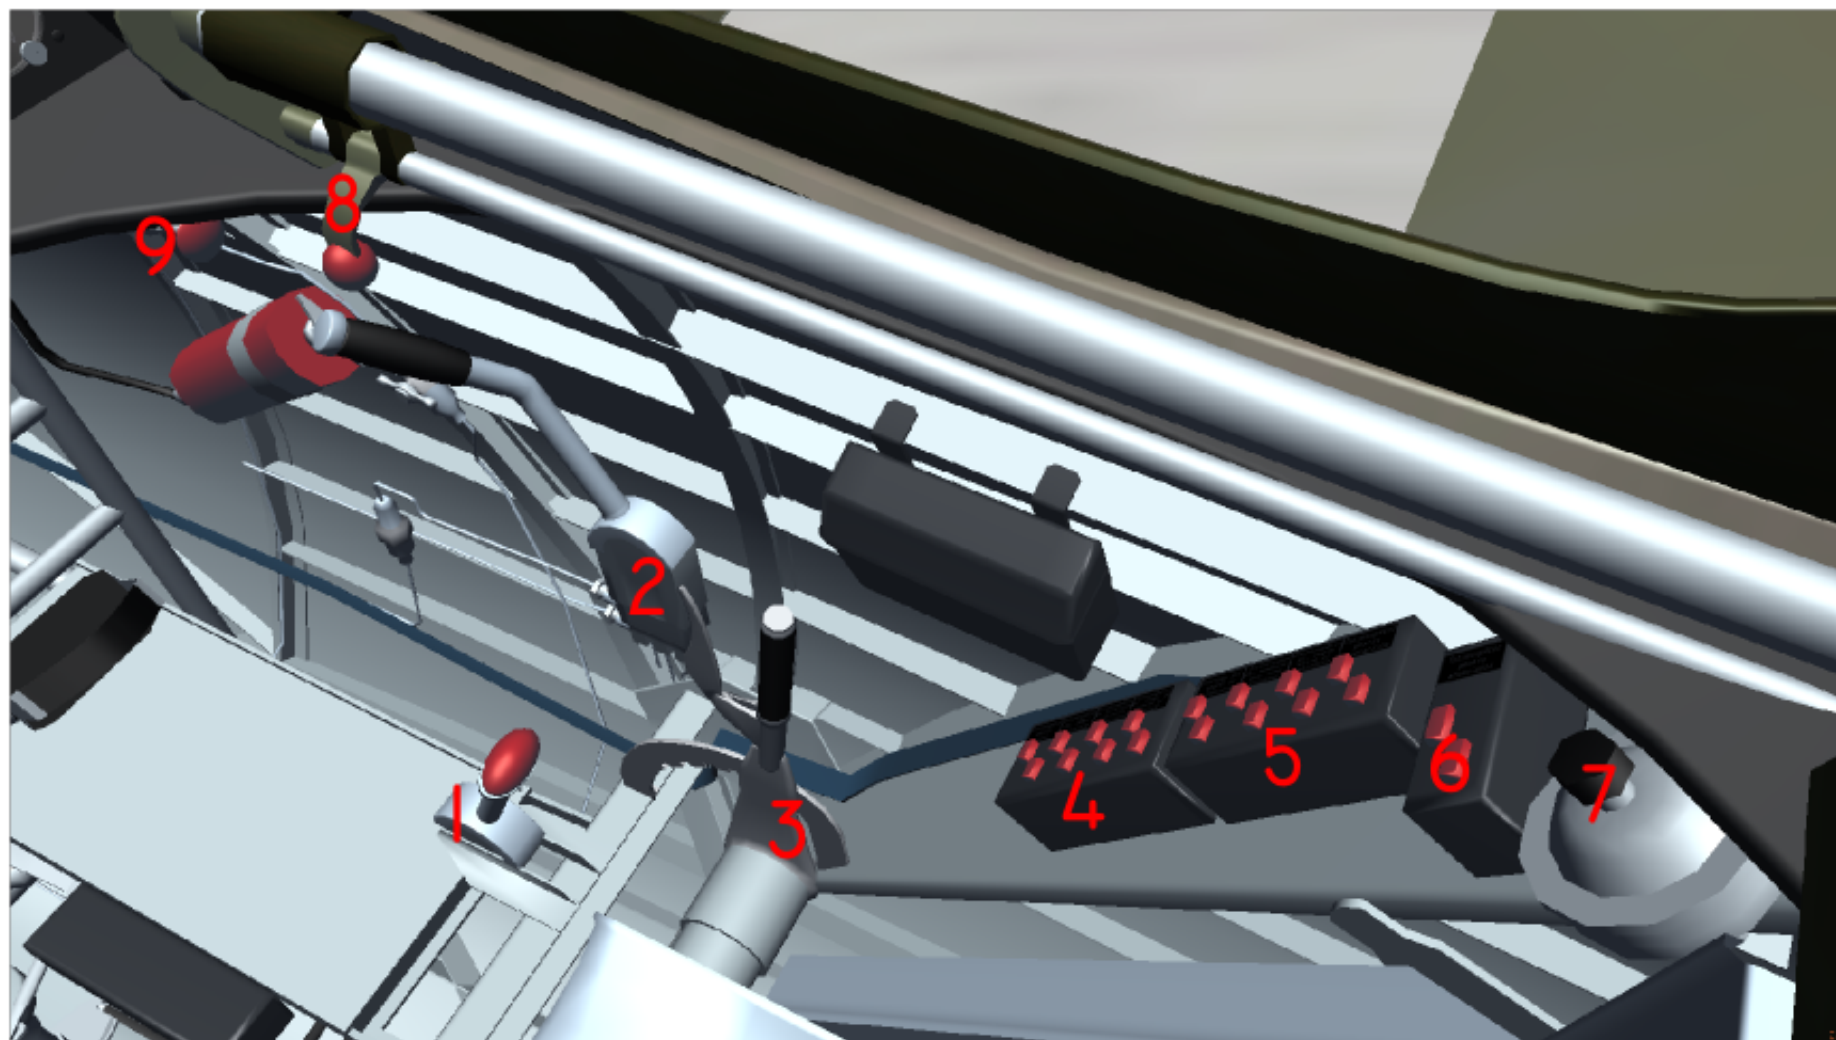

1: COWL-FLAPS LEVER (OPEN-FWD)
 2: MANUAL GEAR PUMP (N/A YET)
 3: SEAT POSITION LEVER (N/A YET)
 4,5,6: CIRCUIT BREAKERS & SWITCHES (N/A YET)

7: MASTER ELECTRICAL SWITCH
 8: CANOPY RELEASE LEVER
 9: PRIMER (N/A YET)

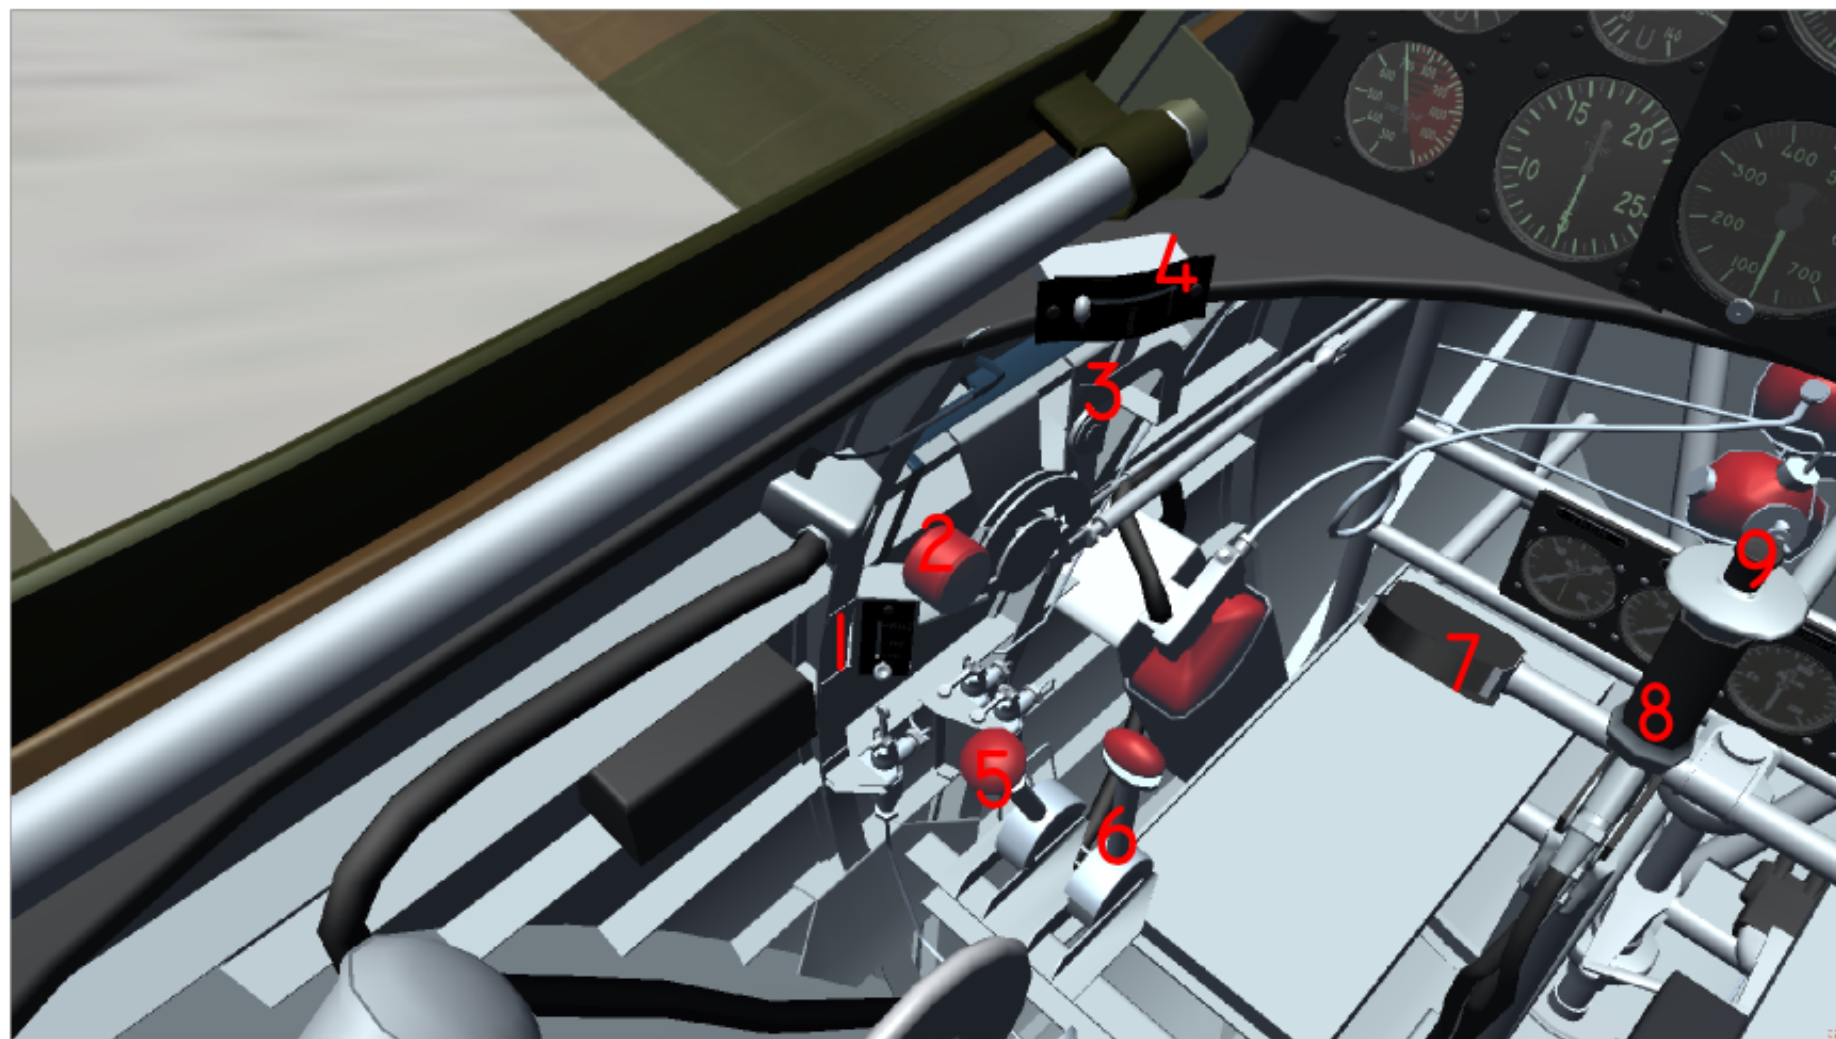

1:MAGNETOS SWITCH
 2:THROTTLE LEVER
 3:MIXTURE LEVER
 4:PROP-PITCH SELECTOR
 5:FLAPS LEVER
 6:GEAR LEVER

7:RUDDER PEDALS
 8:STICK
 9:BRAKES BUTTON